

PERKO®

Cat. No. 0372 Series L.E.D. Spreader Light

The above lights are not designed for navigational use and are not for use below the waterline.

MOUNTING INFORMATION

Read all instructions before proceeding.

- 1). These lights are supplied with the proper circuit for operation on a nominal 12 volt system.
- 2). These lights contain no user serviceable components.
- 3). Wiring should be done by a qualified marine electrician. Attach supply connections to the light, making sure to wire in accordance with both A.B.Y.C. Standard E-9* and U.S. Coast Guard Safety Standards for Boat Electrical Systems (33CFR 183)* Observe polarity.
- 4). The light may be mounted in any orientation that allows for maximum adjustability, on either a flat or round surface. When mounting on a round surface install the saddle between the bracket and mounting surface (see Diagram #1).
- 5). Attach the mounting bracket to the mounting surface using 1/4" Pan Head mounting screw (see Diagram #1).

* The above referenced standards can be obtained from:

(1). American Boat & Yacht Council, Inc.
613 Third Street, Suite 10
Annapollis, MD 21403

(2). U.S. Coast Guard
Washington, D.C. 20593
(or your local C.G. office)

DIAGRAM 1

