


## Instruction manual

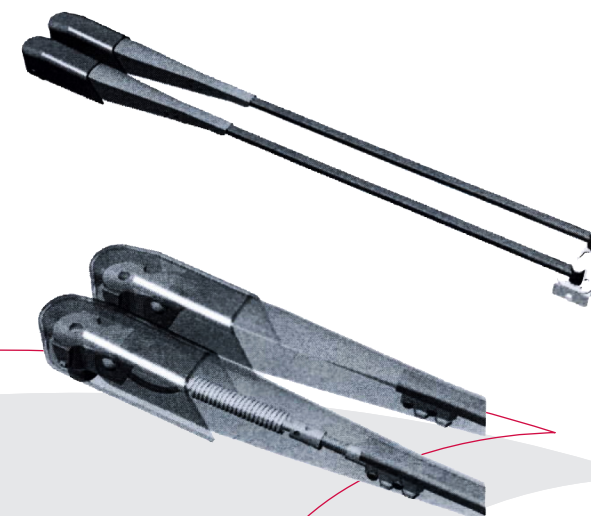

**Exalto**  
Quality Marine Equipment

- P.O. Box 40  
3370 AA Hardinxveld-Giessendam  
The Netherlands
- T +31 (0)184 615800
- F +31 (0)184 614045
- E [sales@exalto.com](mailto:sales@exalto.com)
- I [www.exalto.com](http://www.exalto.com)

**Adjust pantograph wiper arm  
spring pressure**

## How to increase / decrease wiper arm spring pressure

The springs in the pantograph wiper arm are set at a standard pressure for the range of length the arm is supplied as. However, in certain applications, greater spring pressure is required. This can be obtained by rotating the adjustment mechanism with a pin until the required spring pressure is achieved (see illustration on next page).

Note: It is recommended that this is done in gradual steps, as over tightening the spring pressure is not advised.

